

## D-Link Router Setup for Static IP Address



- Unplug the power to the DSL modem and shut down the computer
- Take the cable out of the existing computer and plug it into the WAN port on the router.
- Take the cable that came with your router and plug it into the computer and one of the LAN ports (numbered) of the router.
- Power up the modem, wait 30 seconds, power up the router, wait 30 seconds then turn on your Computer.
- Open Internet Explorer. NOTE: It is very important to use wireless security to avoid access to your network and someone hijacking your Internet connection. If someone uses your connection, you are responsible for their actions.
- Log into your router to setup your security settings, type in the address line 192.168.0.1 and hit enter.



- You will see a log in screen for the router. The default log in is Username: admin Password: (leave blank). Click OK.
- Click Internet, to set your IP address information.

## INTERNET CONNECTION TYPE :

Choose the mode to be used by the router to connect to the Internet.

My Internet Connection is :

## STATIC IP ADDRESS INTERNET CONNECTION TYPE :

Enter the static address information provided by your Internet Service Provider (ISP).

IP Address :	<input type="text" value="0.0.0.0"/>	(assigned by your ISP)
Subnet Mask :	<input type="text" value="0.0.0.0"/>	
ISP Gateway Address :	<input type="text" value="0.0.0.0"/>	
MAC Address :	<input type="text" value="00"/> - <input type="text" value="10"/> - <input type="text" value="ab"/> - <input type="text" value="cd"/> - <input type="text" value="ee"/> - <input type="text" value="04"/>	(optional)
	<input type="button" value="Clone MAC Address"/>	
Primary DNS Address :	<input type="text" value="0.0.0.0"/>	
Secondary DNS Address :	<input type="text" value="0.0.0.0"/>	(optional)
MTU :	<input type="text" value="1500"/>	

- Enter the information provided to you at the time of installation. This information will be similar to the the table below.

**IP Address:**

**Subnet Mask:**

**Gateway:**

**Primary DNS Server Address:** 66.38.0.240

**Secondary DNS Server Address:** 66.38.1.240

- Click "Wireless".
- Click "Wireless Security" to set up your security settings.

Do not operate your router without implementing wireless security. You may find out more about wireless network security by [clicking here](#). You may also consult your router documentation located on your CD.